
## **INSTALLATION**

### 1. INSTALL SHOCK ABSORBER ASSEMBLY REAR LH

- (a) Install the lower bracket to the shock absorber assembly rear LH.
- (b) Install the cushion retainer, cushion No. 1 and shock absorber assembly rear LH with the nut.

Torque: 25 N\*m (255 kgf\*cm, 18 ft.\*lbf)

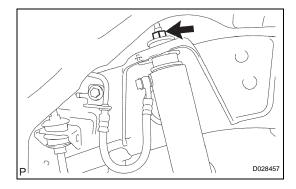


(c) Refer to NOTICE below.


#### NOTICE:

- Be sure to fit the positioning protrusion of the bracket to a hole on the frame.
- to a hole on the frame. Install the hose as it comes in the front.



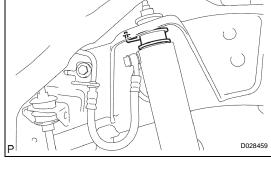

(d) Install the shock absorber assembly rear LH with the bolt.

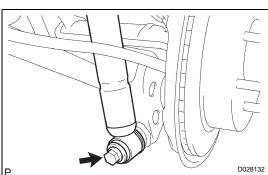

(e) Install the bracket with the bolt.

Torque: 29 N\*m (296 kgf\*cm, 21 ft.\*lbf)


(f) Using a wrench to hold the bracket, install the joint. HINT:


Tighten the joint so that the gap spacing becomes 1 mm (0.04 in.).


**Torque: Reference** 

25 N\*m (255 kgf\*cm, 18 ft.\*lbf)

- 2. INSTALL REAR STABILIZER LINK ASSEMBLY (See page SP-54)
- 3. INSTALL REAR WHEEL
  Torque: 112 N\*m (1,137 kgf\*cm, 83 ft.\*lbf)
- 4. STABILIZE SUSPENSION
  - (a) Jack down the vehicle.

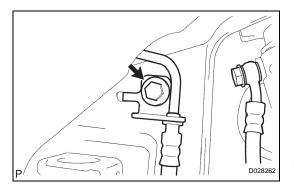

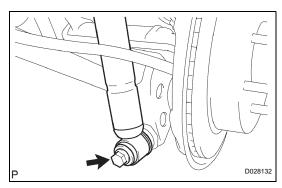

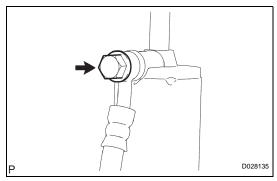

(b) Bounce the vehicle up and down several times to stabilize the suspension.

# 5. FULLY TIGHTEN SHOCK ABSORBER ASSEMBLY REAR LH

(a) Fully tighten the bolt.

Torque: 98 N\*m (1,000 kgf\*cm, 72 ft.\*lbf)

### 6. INSPECT FLUID LEAK

HINT:

(See page SC-3)

# **DISPOSAL**

- 1. DISPOSE OF SHOCK ABSORBER ASSEMBLY REAR LH
  - (a) Loosen the bolt.
  - (b) Drain absorber oil.

SP